


Cutting Instructions

Tools required: square, pencil, tape measure, circular saw with masonry blade, dust mask, 1"X2" 3-4" long for block sanding, 80 grit sandpaper, blanket, saw horses or table.

1. Turn vanity top upside down on saw horses or table. Protect finish with soft blanket.
2. Measure desired length and mark with pencil.
3. Using square, draw cutting line on bottom of top and up the backsplash.
4. Using saw and cutting from bottom of top, from front, cut in 2 inches to back to prevent chipping front edge.
5. Next cut up the backsplash and continue cutting across top to point of original cut from front edge.
6. Smooth sharp edge by block sanding edge. Do not sand finished portion of top.

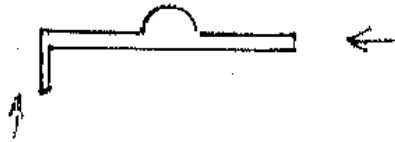

Tiffany Marble Inc.
16 SE 16th Street
Lee's Summit, MO 64081
816-524-0023